

BRAUN

MultiQuick 3 Vario



Type 4193









Register your product
www.braunhousehold.com/register

Hand blender

English	8
عربي	13


© Copyright 2021. All rights reserved
De'Longhi Braun Household GmbH
Carl-Ulrich-Straße 4
63263 Neu-Isenburg/Germany



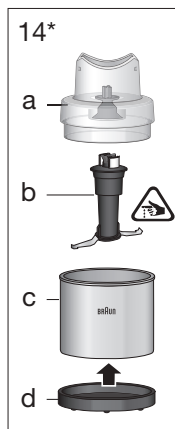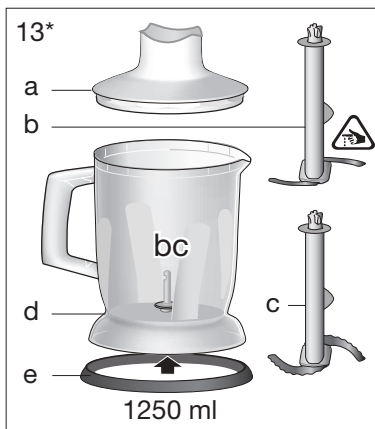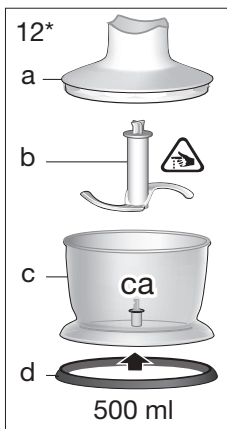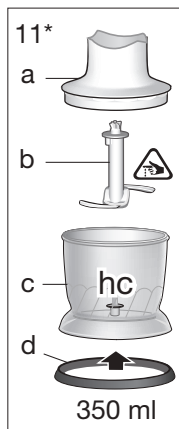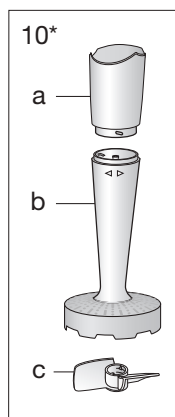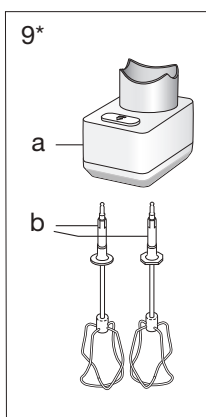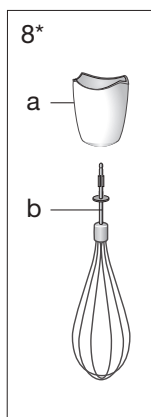
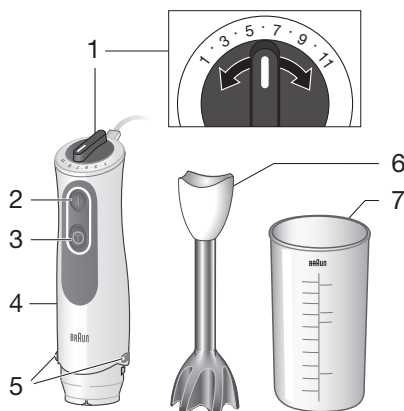


220-240V~ 50-60 Hz 750W



*certain models only

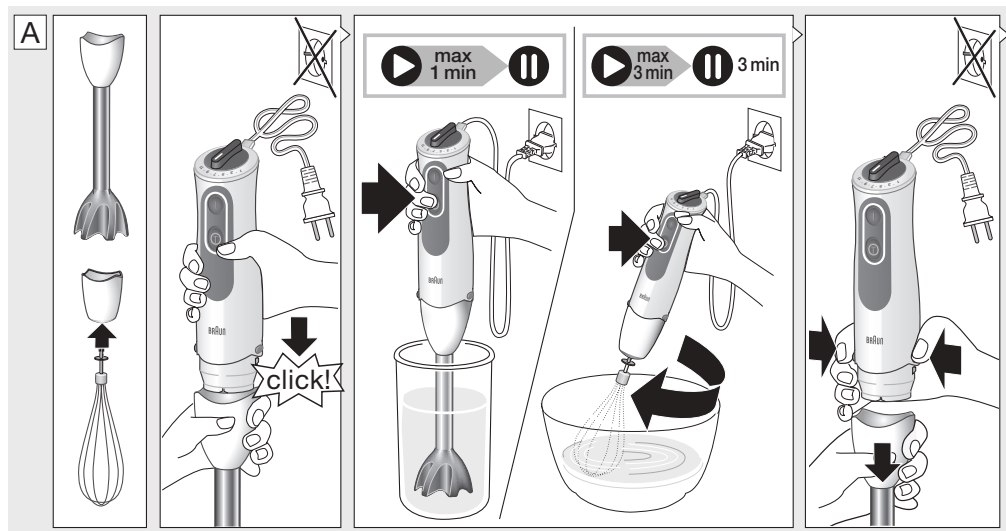

B

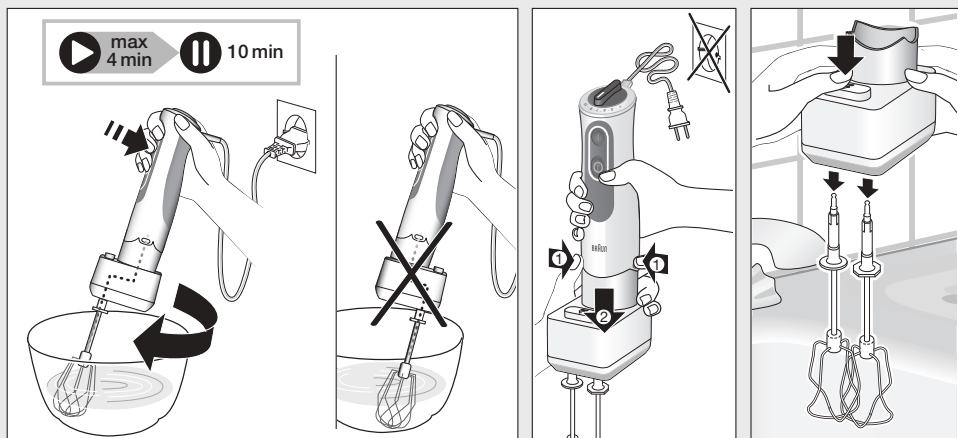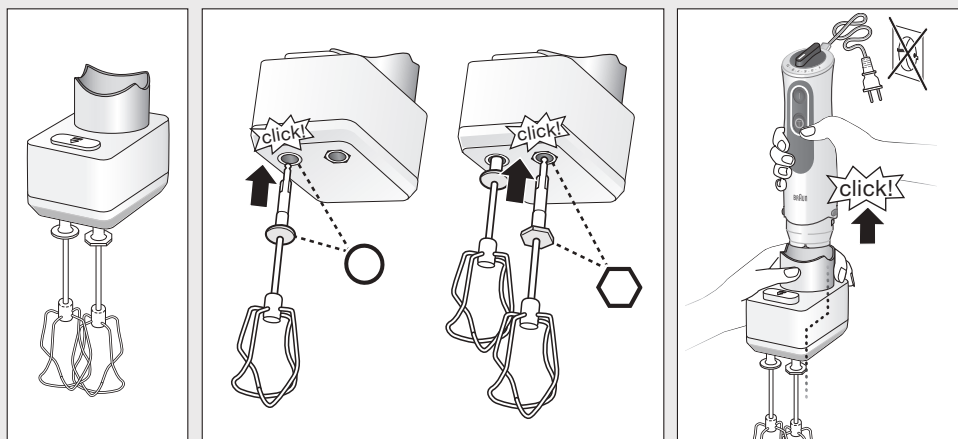


	4...8°C max. 400 ml	15...20°C	15...20°C	15...20°C	15...20°C	< 70°C
max.	400 g	250 g	8	500 g	200 g	1000 g
⌚	100 s	30 s	3 min	4 min	4 min	3 min
	1-11			1-9		

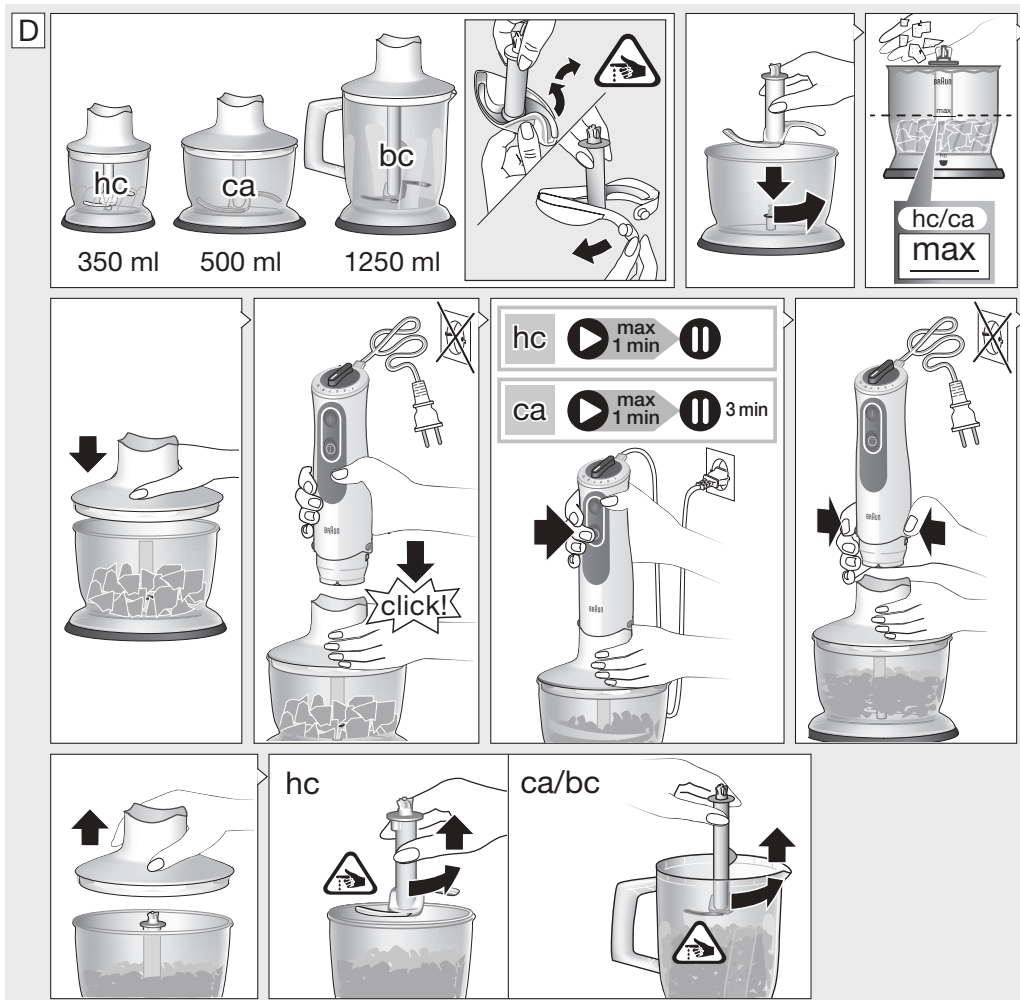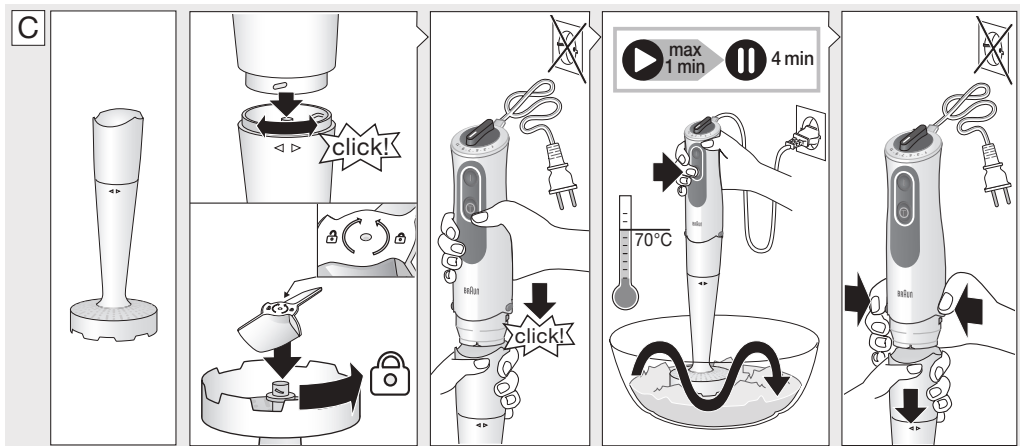



	2cm	2cm						2cm	
max.		100g	10g	100g	80g	50g	7	80g	90g+
⌚ sec.		20	5	10	5	5	5	10	45
		11		1	1	1-11	1-11	1-11	
		+5 sec turbo	turbo	+5 sec turbo	+5 sec turbo				turbo

 


max.	300g	200g	30g	350g	300g	200g	20	200g	
⌚ sec.	15-30	30	20	30	25	10x1	5	15	
				7-11	7-11	1-3	1-11	1-11	
	turbo	turbo	turbo	+5 sec turbo	+5 sec turbo				




	2cm	2cm						2cm	
max.	400g	200g	30g	400g	350g	250g	30	250g	150 g + 700 ml
⌚ sec.	30	20-30	15	15	15	15x1	10	15	60 + 15
				7-11	7-11	1-3	3-11	1-5	
	turbo	turbo	turbo	+5 sec turbo	+5 sec turbo				turbo

E

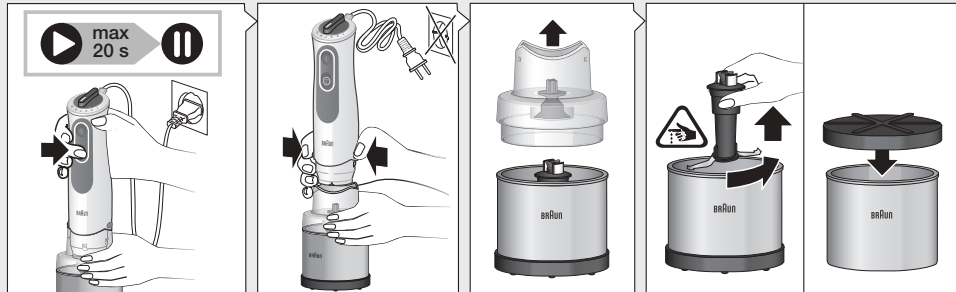

												
max.	70 g	30 g	20g/5l	60 g	40 g	90 g	130 g	60 g	100 g	30g	20 g	150 g
speed	T											

F

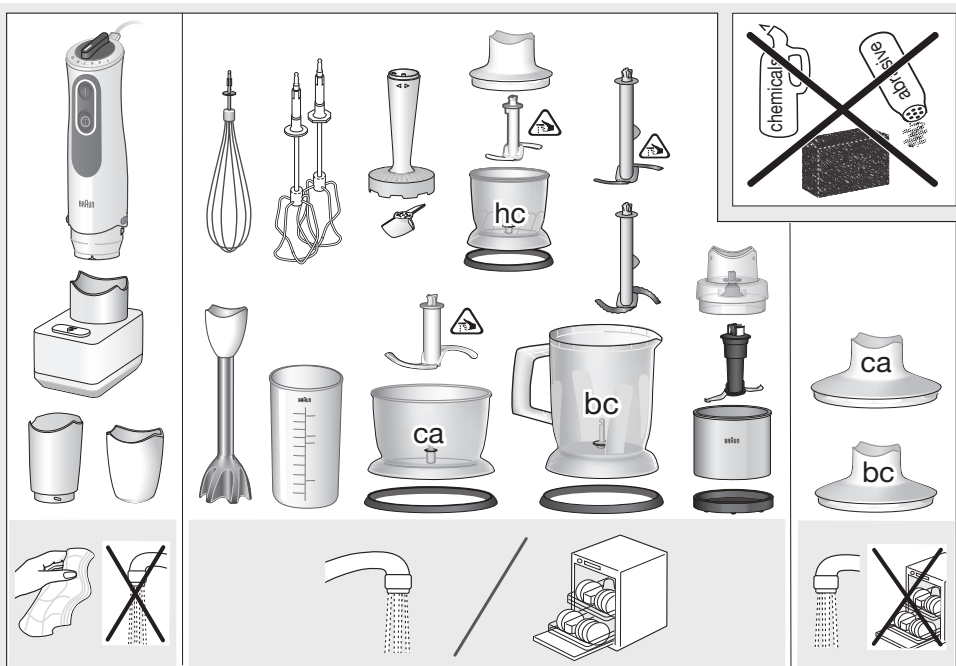

English

Before use



Please read the user instructions carefully and completely before using the appliance and retain for future reference. Remove all packaging and labels and dispose them appropriately.

Caution

-  The blades are very sharp! To avoid injuries, please handle blades with utmost care.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- This appliance shall not be used by children.
- Children shall be kept away from the appliance and its mains cord.
- Cleaning and user maintenance shall not be made by children without supervision.
- Always unplug and switch off the appliance when it is left unattended and before assembling, disassembling, cleaning and storing.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Before plugging into a socket, check whether your voltage corresponds with the voltage printed on the bottom of the appliance.
- This appliance is designed for household use only and for processing normal household quantities.

- Do not use any part in the microwave.
- Please clean all parts before first use or as required, following the instructions in the Care and Cleaning section.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from whisks and dough hooks in operation to prevent personal injury. Do not contact moving parts during operation.
- Stop using the device if it is damaged.
- If the device falls into liquid, unplug, before reaching into the liquid.

Parts and Accessories

- Variable speed regulator
- Variable speed button (on/off)
- Turbo button
- Motor part
- EasyClick Release buttons
- Blender shaft
- Beaker
- Whisk accessory
 - Gearbox
 - Whisk
- Double Beater accessory
 - Gearbox with release button
 - Beaters
- Puree accessory
 - Gearbox
 - Puree shaft
 - Paddle
- 350 ml chopper accessory «hc»
 - Lid
 - Chopping blade
 - Chopper bowl
 - Anti-slip rubber ring
- 500 ml chopper accessory «ca»
 - Lid (with gear)
 - Chopping blade
 - Chopper bowl
 - Anti-slip rubber ring
- 1250 ml chopper accessory «bc»
 - Lid (with gear)
 - Chopping blade
 - Ice blade
 - Chopper bowl
 - Anti-slip rubber ring
- Coffee and Spice Grinder Accessory
 - Lid with coupling
 - Grinder knife
 - Bowl
 - Anti-slip-base / lid

How to Use the Appliance

Setting the speed

When activating the variable speed button (2), the processing speed corresponds to the setting of the variable speed regulator (1). The higher the setting, the faster the chopping results. You can adjust the speed conveniently during operation by turning the speed regulator.

Maximum processing speed can be achieved by pressing the Turbo button (3). You may also use the Turbo button for instant powerful pulses without having to manipulate the speed regulator.

Blending Shaft (A)

The hand blender is perfectly suited for preparing dips, sauces, salad dressings, soups, baby food, as well as drinks, smoothies and milkshakes.

For best results, use the Turbo speed.

For detailed processing instructions refer to section A.

Whisk Accessory (A)

Use the whisk only for whipping cream, beating egg whites, making sponge cakes and ready-mix desserts.

For best results, use the highest speed.

For detailed processing instructions refer to section A.

Double Beater Accessory (B)

Use the double beater only for pancake batter, cake batter, cream, egg whites and mashed potatoes. Do not use the accessory for heavy doughs and kneading doughs like pizza, pasta, shortcrust or bread.

For batters or doughs, first beat the liquid ingredients until light and creamy, then add the dry ingredients gradually. If the mixture is becoming too dense, finish by hand.

The beaker (7) should not be used with the double beater accessory.

For detailed processing instructions refer to section B.

Puree Accessory (C)

The puree accessory can be used to mash cooked vegetables and fruits such as potatoes, sweet potatoes, tomatoes, plums and apples.

Dip the puree accessory into the ingredients and switch on the appliance at speed 11.

For detailed processing instructions refer to section C.

Chopper Accessory (D)

The choppers (10/11/12) are perfectly suited for chopping meat, hard cheese, onions, herbs, garlic, vegetables, bread, crackers and nuts.

Do not use the chopper accessories (11/12/13) to process extremely hard foods, such as unshelled nuts, ice cubes, coffee beans, grains, or hard spices e.g. nutmeg. Processing these foods could damage the blades.

Furthermore, the «bc» chopper offers a variety of other applications like shakes, drinks, purées, batter or crushed ice.

Only the «bc» chopper accessory (13) with the special ice blade (13c) is allowed to crush ice cubes.

For «hc» chopper do not exceed the quantity of ingredients higher than max line. Maximum operation time for the «hc» chopper: 1 minute for large amounts of wet ingredients, 30 seconds for dry or hard ingredients.

NOTE: leave an interval of at least 3 minutes before operating again (To prevent faults). Immediately stop processing when motor speed decreases and/or strong vibrations occur.

For detailed processing instructions refer to section D.

«hc» Recipe example: Honey-Prunes (as a pancake stuffing or spread)

50 g prunes

70 g creamy honey

10 ml water (vanilla-flavour)

- Fill the «hc» chopper bowl with prunes and creamy honey.
- Chop 4 seconds at maximum speed
- Add 10 ml water (vanilla-flavoured).
- Resume chopping for another 1,5 seconds at maximum speed.

Coffee and Spice Grinder Accessory (E)

The grinder is perfectly suited for grinding any kind of dry spices or other ingredients, such as pepper, cloves, chili, coffee or soya beans, rice, poppy s

For finest results, use the highest speed.

Care and Cleaning (F)

For detailed processing instructions refer to section F.

Warranty and Service

For detailed information see separate warranty and service leaflet or visit www.braunhousehold.com.

Please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at appropriate collection points provided in your country.



Materials and accessories coming into contact with food conform to EEC regulation 1935/2004.



For UK Only

Guarantee Information

All Braun Household products carry a minimum guarantee period of two years. The rights and benefits under this guarantee are additional to your statutory rights which are not affected.

Please keep your receipt as this will form the basis of your guarantee.

In the unlikely event of a breakdown you have access to professional help from our team simply by calling: 0345 222 0458

For service in the Republic of Ireland please call: 012475471

Braun Household undertakes within the specified period to repair or replace any part of the appliance, free of charge (with the exception of any glass or porcelain-ware incorporated in the product) found to be defective provided that;

- We are promptly informed of the defect.
- The product is used and maintained in accordance with the User Instructions.
- The appliance has not been altered in any way or subjected to misuse or repair by a person other than an authorised service agent for Braun Household.
- No rights are given under this guarantee to a person acquiring the appliance second hand or for commercial or communal use.
- Any repaired or replaced appliance will be guaranteed on these terms for the unexpired portion of the guarantee.
- The need for repair has not been caused by insufficient aftercare or cleaning; or damage caused by the chemical or electrochemical effects of water.

Under no circumstances shall the application of this guarantee give rise to the complete replacement of the appliance or entitle the consumer to damages.

Braun Household, New Lane, Havant, Hampshire PO9 2NH
www.braunhousehold.co.uk

Thank You for choosing Braun. We are confident that you will get excellent service from this product.

TO IMPROVE YOUR EXPERIENCE

Register now at www.braunhousehold.co.uk
By registering we may send you from time to time details on exclusive offers, promotions, recipes and inside tips.

Troubleshooting Guide

Problem	Possible cause	Solution
Hand blender does not operate.	No power	Check appliance is plugged in. Check the fuse /circuit breaker in your home. If none of the above contact Braun Service.
Beaters rattle or touch while running	Beaters got stuck	Remove and re-insert the beaters